



Remove the steering stem nut.

Remove the top bridge, mounts and handlebar lower cover.


LOCK NUT WRENCH, 26 x 30 mm  
EXTENSION HANDLE AND BAR



Remove the bearing adjusting nut.

Remove the front fork, upper cone race and steel balls.

PIN SPANNER, 36 mm  
07902-0010000

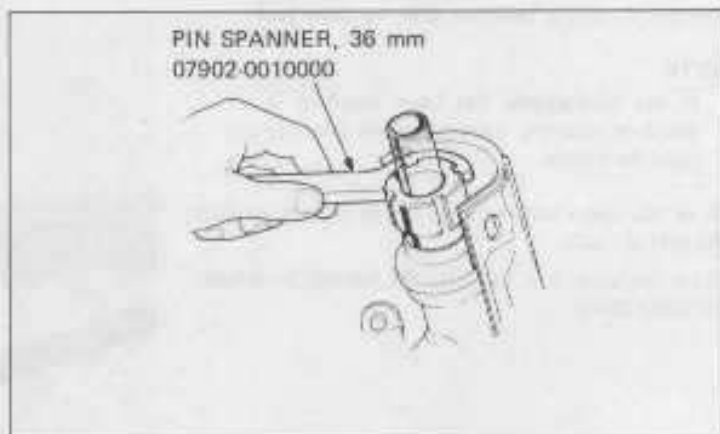


### LOWER CONE RACE REPLACEMENT

Remove the lower cone race, dust seal and washer.

Install a new dust seal and washer.

Drive a new lower cone race over the stem.

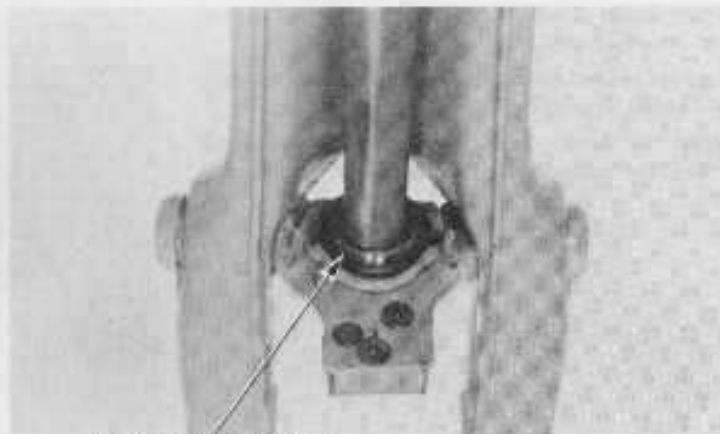

LOWER CONE RACE