


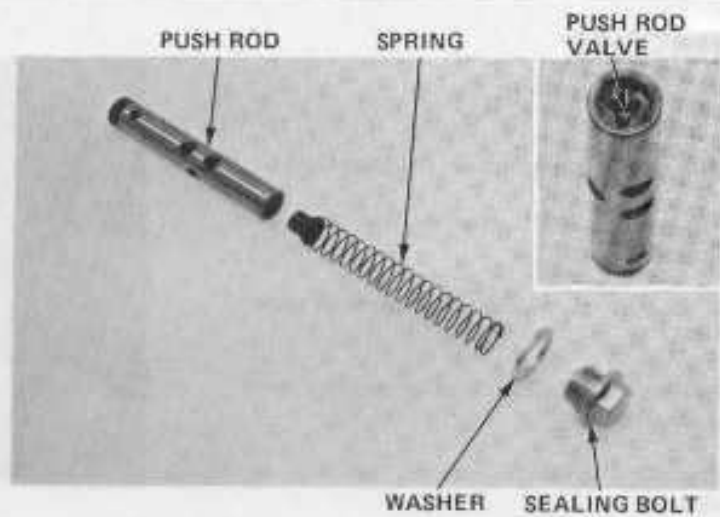

Install the push rod, spring, washer and sealing bolt.

**NOTE:** Make sure the push rod valve is free from dust before installation.



Torque the sealing bolt.

**TORQUE:** 2.0–2.5 kg-m (15–18 ft-lb)

Fill the crankcase with the recommended oil (page 20-4).

Pour clean engine oil through the 6 mm bolt hole until oil flows out of the hole.

Install the 6 x 18 mm bolt and sealing washer.

**NOTE:** Use the proper length bolt. A longer bolt may interfere with the push rod.

