



# FRAME/BODY PANELS/EXHAUST SYSTEM

Disconnect the seat lock cable.


Disconnect the tail/brake light connector and rear turn signal connectors.

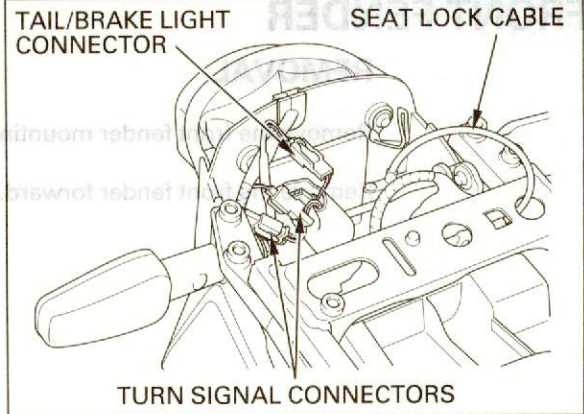

Remove the rear fender mounting special bolts.

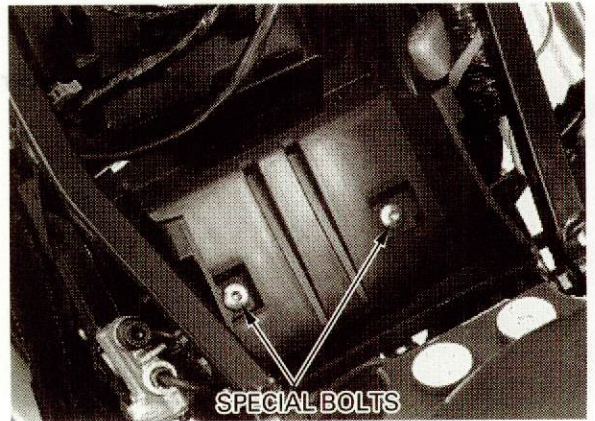

Remove the rear fender mounting bolts, nuts and collars.

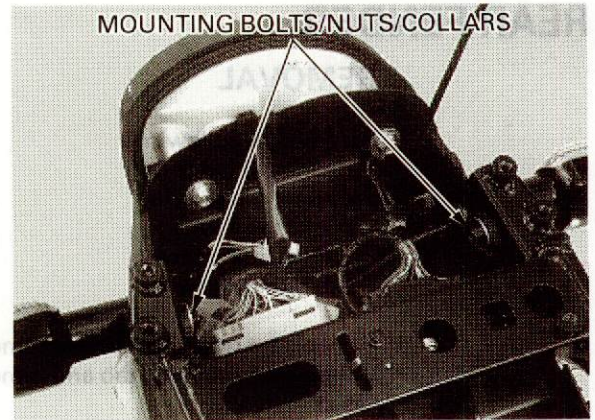

Remove the rear fender backward.

