

2. Frame/Body Panels/Exhaust System

Service Information	2-1	Rear Fairing Removal/Installation	2-3
Troubleshooting	2-1	Fuel Tank Removal/Installation	2-3
Seat Removal/Installation	2-2	Rear Fender Removal/Installation	2-4
Side Cover Removal/Installation	2-2	Exhaust System Removal/Installation	2-6

Service Information

▲ WARNING

- Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.
 - Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.
-
- Work in a well ventilated area. Smoking or allowing flames or sparks in the working area or where gasoline is stored can cause a fire or explosion.
 - This section covers removal and installation of the frame body panels, fuel tank and exhaust system.
 - Always replace the exhaust pipe gaskets when removing the exhaust pipe from the engine.
 - When installing the exhaust pipe, first install all the fasteners loosely. Next, tighten the exhaust clamps first, then tighten the mounting fasteners. If you tighten the mounting fasteners first, the exhaust pipe will not seat properly.
 - Always inspect the exhaust system for leaks after installation.

Troubleshooting

Excessive Exhaust Noise

- Broken exhaust system
- Exhaust gas leak

Poor Performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler