

Rear Fairing Removal/Installation


Remove the seat (page 2-2).

Remove the caps and grab rail mounting bolts.
 Remove the grab rail.
 Remove the screws.
 Release the fairing front bosses from grommets and remove the rear fairing.

Install the rear fairing in the reverse order of removal.

Torque:
 Grab rail mounting bolt: 27 N·m (2.7 kg-m, 20 ft-lb)

Install the seat (page 2-2).

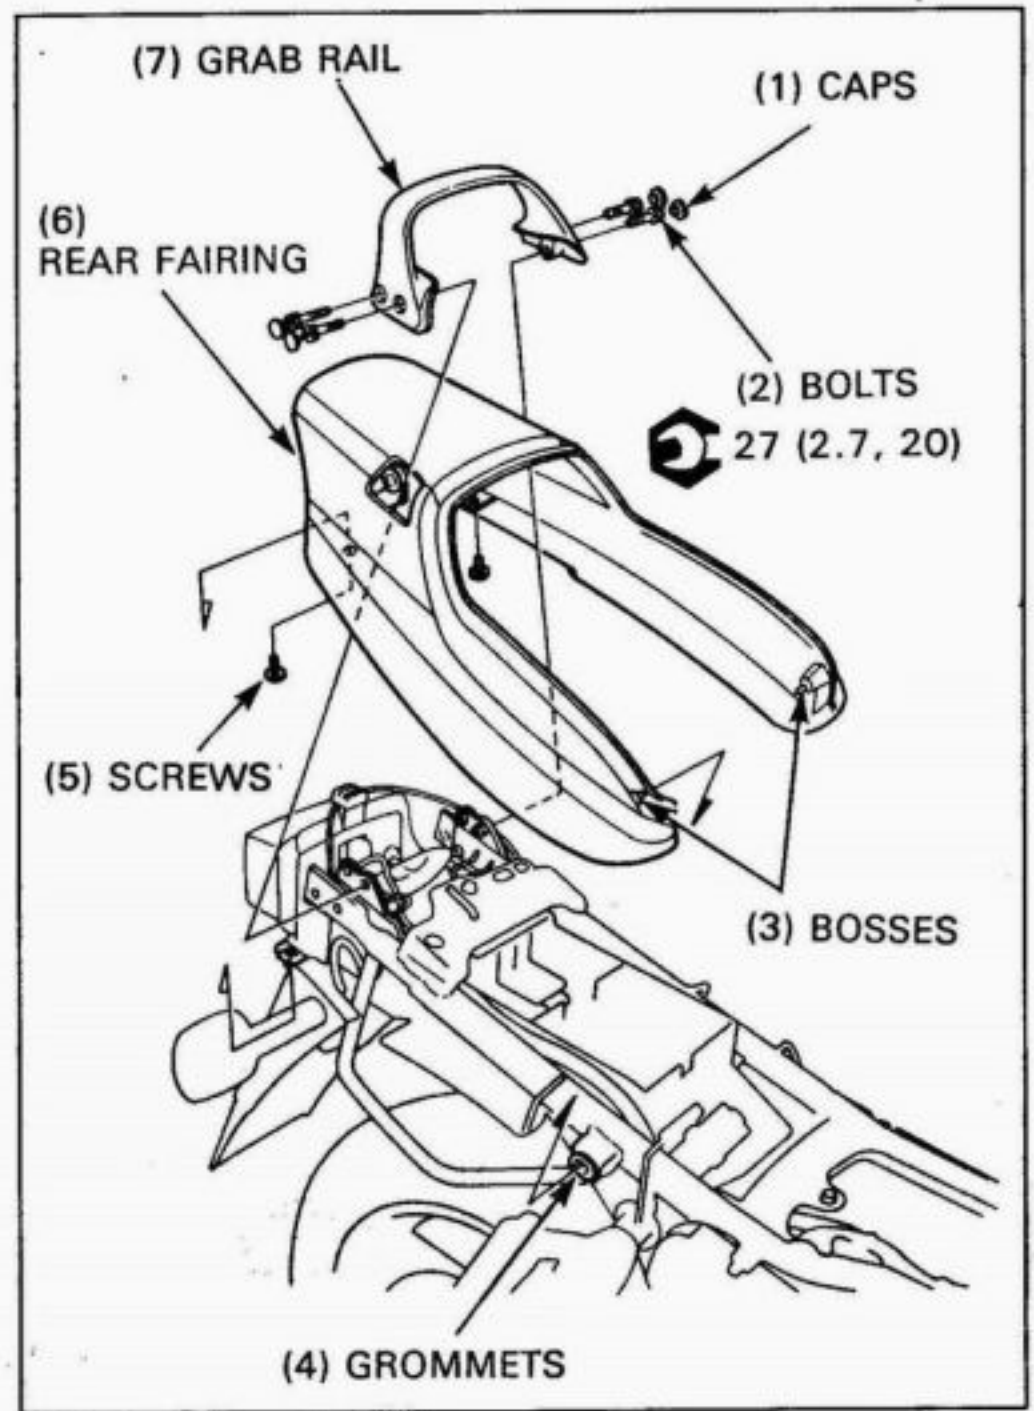

Fuel Tank Removal/Installation

▲ WARNING

• Gasoline is extremely flammable and is explosive under certain condition.

Remove the seat (page 2-2).
 Remove the side cover (page 2-2).

Turn the fuel valve OFF.
 Remove the fuel tank mounting bolt and lift the fuel tank up.
 Disconnect the tubes, and remove the fuel tank.

Install the fuel tank in the reverse order of removal.

Torque:
 Fuel tank mounting bolt: 27 N·m (2.7 kg-m, 20 ft-lb)

After installation, turn the fuel valve ON and check the fuel line for leakage.

Install the side cover (page 2-2).
 Install the seat (page 2-2).

