


# Service Access Guide

- The following shows the locations of the parts that must be removed for the maintenance items listed below. Refer to the Common Service Manual for items not included in this manual.
- Refer to section 2 (Frame/Body Panels/Exhaust System), for the parts that must be removed for service.  
For example: AIR CLEANER (Contamination, clogging, replacement): Parts
  - Side cover ————— The part required to be removed for service.

(13) SYNCHRONIZATION ADJUSTING SCREW (Synchronization, page 3-5)  
• Fuel tank

(12) BATTERY (Level check, terminal connections)  
• Side cover

(11) CALIPER (Pad wear)

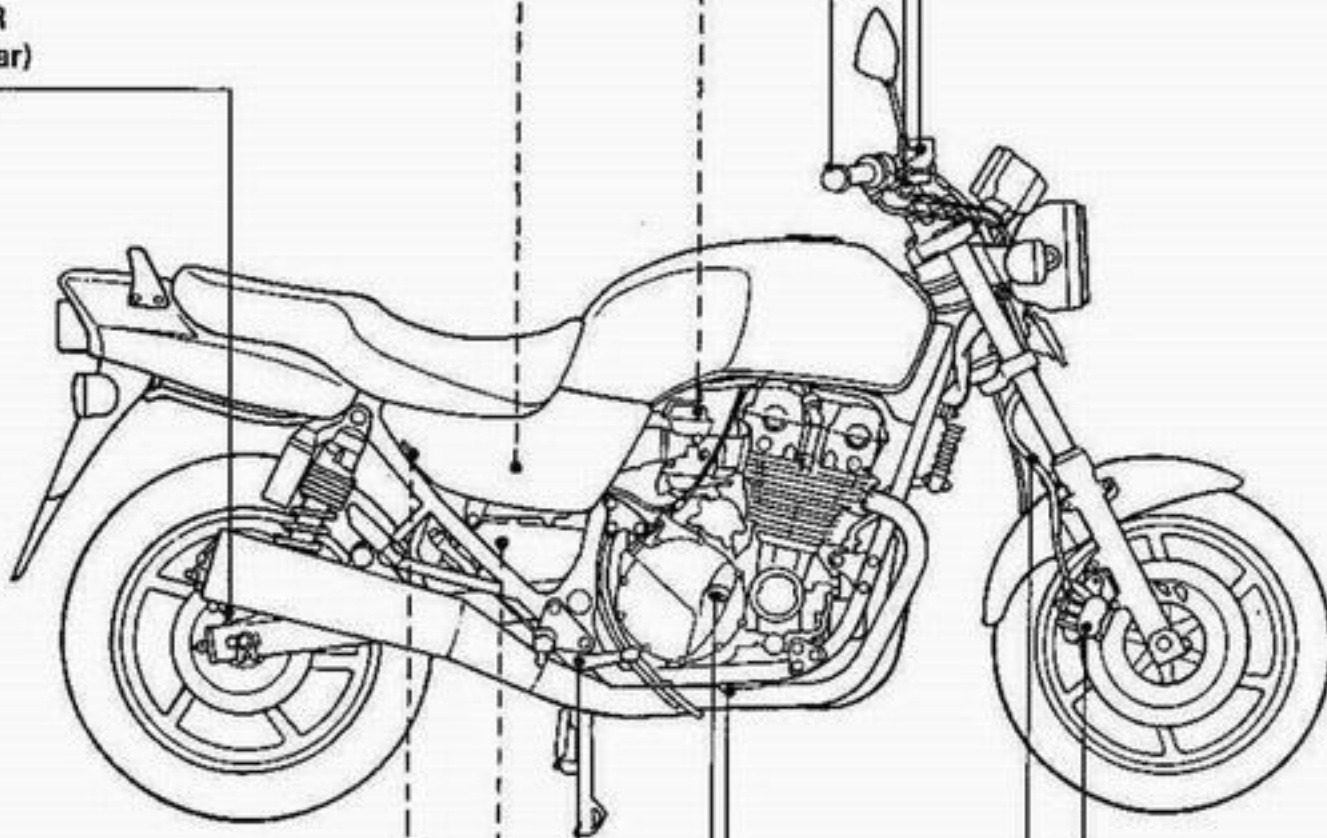

(10) BRAKE RESERVOIR (Level check, fluid replacement)  
• Side cover

(9) BRAKE LIGHT SWITCH (Operation)

(8) BRAKE PEDAL (Air bubbles in system, height)

(1) THROTTLE GRIP (Operation, free play)

(2) BRAKE LEVER (Air bubbles in system)

(3) BRAKE MASTER CYLINDER (Level check, fluid replacement)

(4) CALIPER (Pad wear)

(5) BRAKE HOSE (Leakage, degradation, damage)

(6) ENGINE OIL DRAIN BOLT (Replacement)

(7) LEVEL GAUGE (Level check, replacement)