

Oil Pressure Check

Warm the engine up to normal operating temperature (approximately 80°C/176°F).

Stop the engine.

Place the motorcycle on its side stand.

Remove the right sealing bolt and connect an oil pressure gauge to the plug hole with an attachment.

S TOOL

Oil pressure gauge	07506-3000000
Oil pressure gauge attachment	07510-MJ10100



Place the motorcycle on its center stand.

Check the oil level.

Start the engine and check the oil pressure at 6,000 min⁻¹ (rpm).

OIL PRESSURE: 630 kPa (6.3 kg/cm², 90 psi) at (80°C/176°F) 6,000 min⁻¹(rpm)

Stop the engine and place the motorcycle on its side stand.

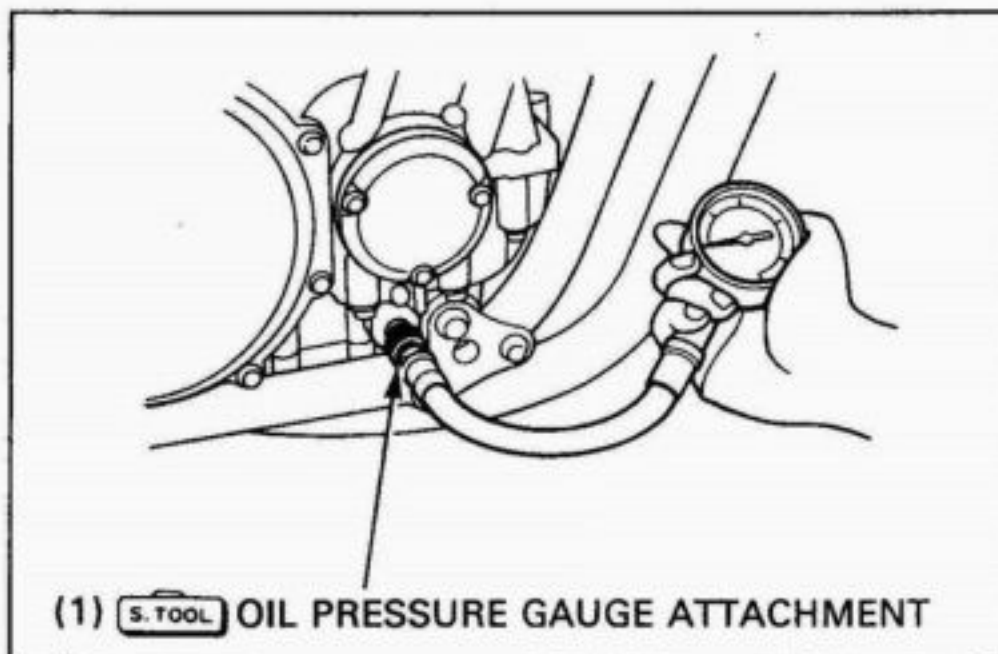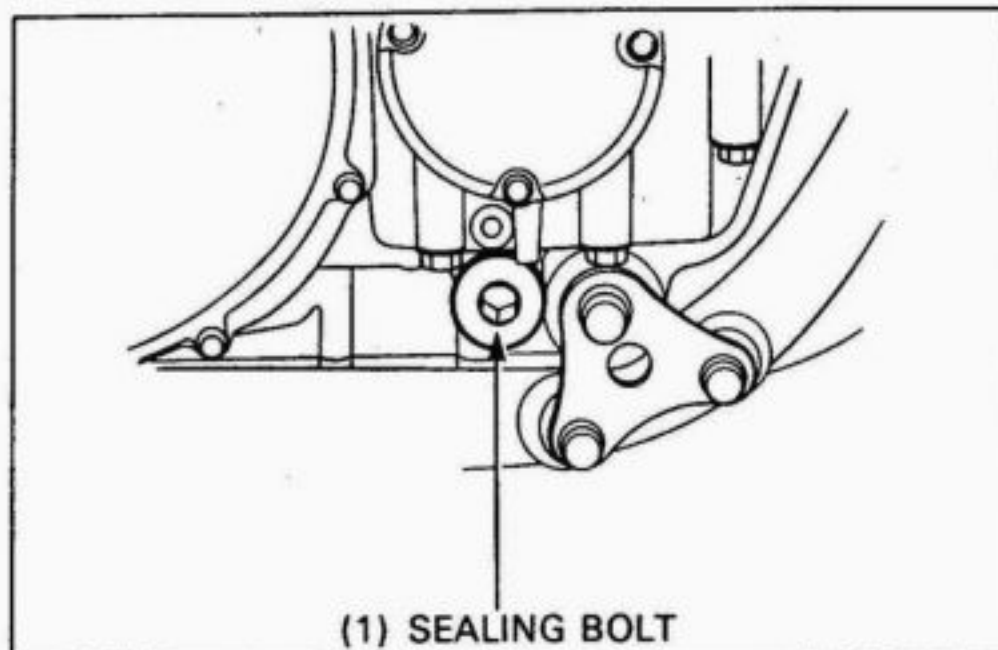

Remove the pressure gauge and attachment.

Apply sealant to the sealing bolt threads and install the bolt with new sealing washer.

Torque: 30 N·m (3.0 kg-m, 22 ft-lb)

Start the engine.

Check that the oil pressure warning indicator goes out after one or two seconds.

If the pressure warning indicator stays on, stop the engine immediately and determine the cause.

