

▲ WARNING

• Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.

- Work in well ventilated area. Smoking or allowing flames or sparks in the working area or where gasoline is stored can cause a fire or explosion.

NOTE

• Before removal, turn the fuel valve OFF.

Requisite Service

- Fuel tank removal/installation (page 2-3)
- Carburetor draining

Procedure		Q'ty	Remarks
	Removal Order		Installation is in the reverse order of removal.
(1)	Breather tank mounting bolt	2	
(2)	No. 26 tube	1	
(3)	No. 27 tube	1	
(4)	No. 25 tube	1	
(5)	Breather tank	1	
(6)	Connecting tube band screw	4	Loosen only.
(7)	Air cleaner case mounting bolt	4	Move the air cleaner case rearward.
(8)	Insulator band screw	4	Loosen only.
(9)	Throttle cable	2	
(10)	Choke cable	1	
(11)	Carburetor assembly	1	