
6. Engine Removal/Installation

Service Information

6-1 Engine Removal/Installation

6-2

Service Information

- A floor jack or other adjustable support is required to support and maneuver the engine.
- The following components can be serviced with the engine installed in the frame:
 - Oil pump (Section 4)
 - Cylinder head/cylinder/piston (Section 7)
 - Clutch/gearshift linkage (Section 8)
 - Alternator (Section 13)
- The following components require engine removal for service:
 - Transmission/shift forks/shift drum (Section 9)
 - Crankshaft/connecting rod/starter clutch (Section 9)

6