

**▲ WARNING**

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

**NOTE**

- Always replace wheel bearings as a set.
- For wheel bearing replacement, refer to section 1 of the Common Service Manual.

**Requisite Service**

- Front wheel removal/installation (page 10-4)

Procedure		Qty	Remarks
	<b>Disassembly Order</b>		Assembly is in the reverse order of disassembly.
(1)	Brake disc bolt	12	
(2)	Brake disc	2	Install with the stamped side outward as shown.
(3)	Shim	12	
(4)	Dust seal	2	At installation, apply grease to the dust seal lips.
(5)	Speedometer gear retainer	1	
(6)	Left wheel bearing (6004 UU)	1	
(7)	Distance collar	1	
(8)	Right wheel bearing (6004 UU)	1	At assembly, drive in the right side bearing first, then the left side bearing.
(9)	Front wheel/tire	1/1	