




(1) SPANNER WRENCH

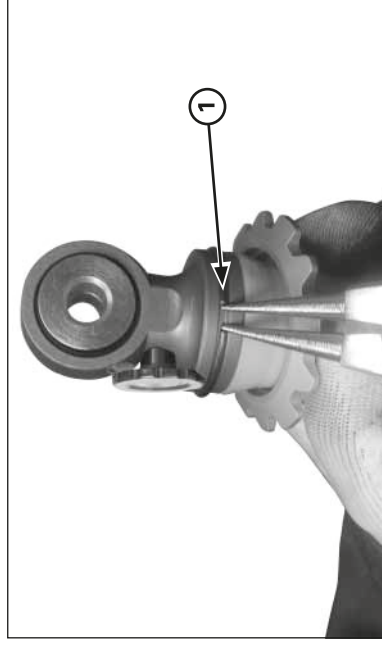

(1) CIRCLIP


Removal

Secure the damper in a bench vise

Loosen the lock nut and the spring adjuster using the spanner wrench (07702-0020001).

Move the spring up next to the fastener plate.

Remove the Seeger fastener ring and remove the spring plate and the spring from the damper body.

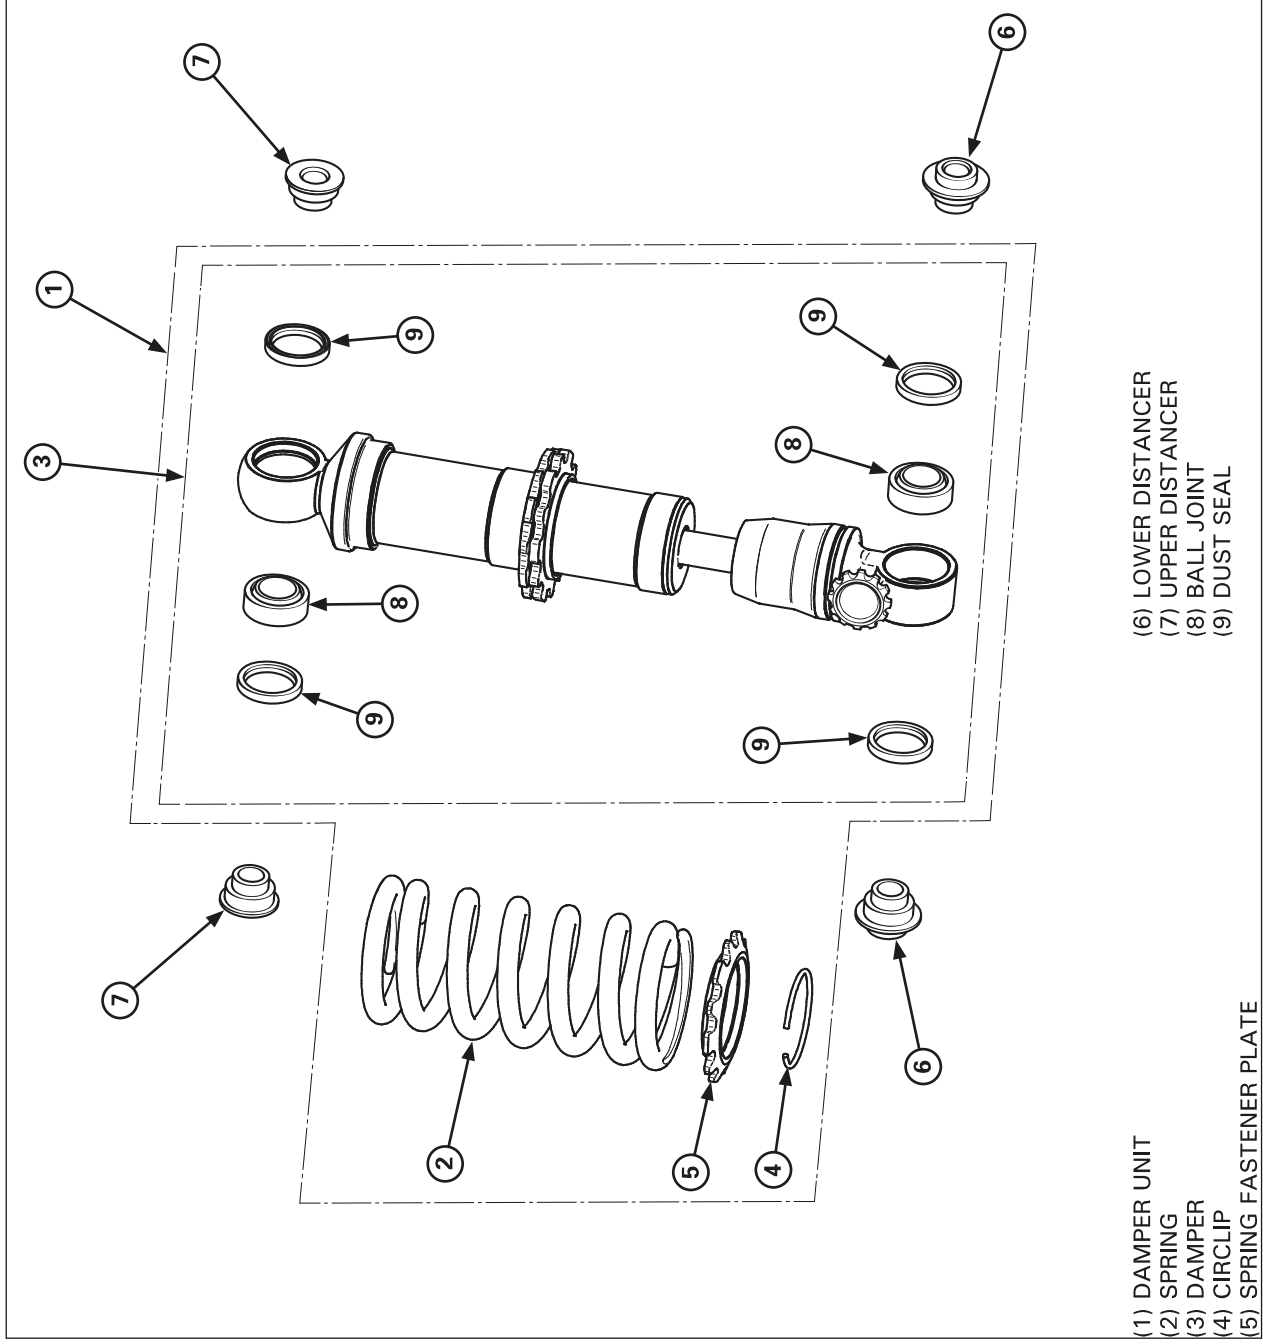

- (1) DAMPER UNIT
- (2) SPRING
- (3) DAMPER
- (4) CIRCLIP
- (5) SPRING FASTENER PLATE
- (6) LOWER DISTANCER
- (7) UPPER DISTANCER
- (8) BALL JOINT
- (9) DUST SEAL