

Front Cylinder Removal

Remove cylinder water hose & RC valve control cable

Remove control cable pulley

* Take care as nut is left hand thread

Remove cylinder nut, cylinder, gasket and knock pin

* Take care not to damage cylinder index mark

* Take care not to frop knock pin

Piston Removal

Remove piston pin clip, pull out piston pin and remove piston

Remove conrod small end bore needle bearing from conrod

* Take care not to damage piston
* When pulling out piston pin do not change composition in conrod
* take care that clip does not fall into crankcase

Piston Ring Removal

Open piston ring gap and remove from opposite side of gap

Remove expander

