


Insert new R.mainshaft bearing into mainshaft

Standard Tools

Driver handle C
 Inner driver (25mm)

07746-0030100
 07746-0030200

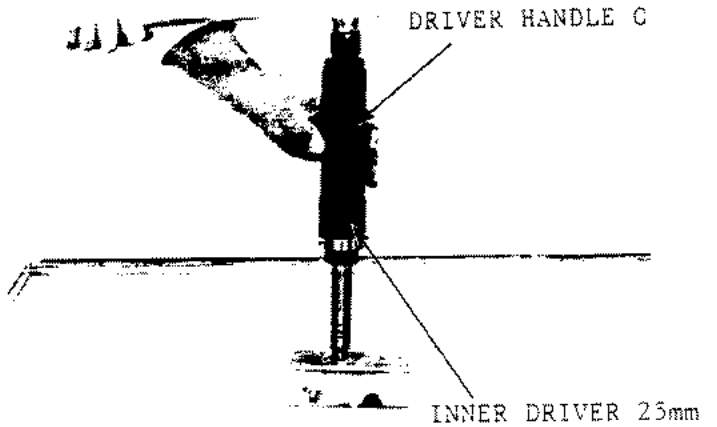

- * Insert with bearing mark facing outwards
- * Insert into mainshaft using weight

TRANSMISSION INSTALLATION

Apply transmission oil to each moving part

