

## Maintenance

# Maintenance Schedule

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I : Inspect and clean, adjust, lubricate or replace if necessary.

C : Clean R : Replace A : Adjust L : Lubricate

The following items require some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult your authorized Honda dealer.

### U type

Items	Frequency	Whichever comes first ↓ Note	Odometer Reading (Note 1)				Refer to page	
			x 1,000 km	1	4	8		12
			x 1,000 mi	0.6	2.5	5		7.5
			Months		6	12		18
* Fuel Line				I	I	I	Note 3	
* Throttle Operation				I	I	I	Note 3	
** Oil Pump and Oil Line				I	I	I	3-6	
Air Cleaner		Note 2		C	C	C	Note 3	
Spark Plug			Every 1,600 km (1,000 mi) R				Note 3	
** Decarbonizing			Every 3,000 km (2,000 mi) C				Note 3	
* Carburetor Idle Speed			I	I	I	I	Note 3	
Brake Shoe Wear				I	I	I	Note 3	
Brake System			I	I	I	I	Note 3	
* Brake Light Switch				I	I	I	Note 3	
* Headlight Aim				I	I	I	3-6	
** Clutch Shoe Wear					I		Note 3	
* Suspension				I	I	I	Note 3	
* Nuts, Bolts, Fasteners			I		I		Note 3	
** Wheels/Tires				I	I	I	Note 3	
** Steering Head Bearings			I			I	Note 3	

\* Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

\*\* In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.

Notes: 1. At higher odometer reading, repeat at the frequency interval established here.

2. Service more frequently when riding in unusually wet or dusty areas.

3. Refer to Common Service Manual.