

## General Information

Frame	Location	Material	Remarks
	Rear axle bearing holder needle bearing	Molybdenum disulfide grease	
	Rear axle bearing holder ball bearings Swingram pivot bearings Shock absorber lower bearing Shock link bearings Drive sprocket hub O-ring Steering head bearings Steering head dust seal lips Side stand pivot Center stand pivot Seat lock hook Throttle grip pipe flange and cable end Rear brake pedal pivot Footpeg pivot Dust seal lips	Multi-purpose grease	
	Throttle cable Choke cable	Cable lubricant	
	Caliper piston Brake/clutch master piston and cup	DOT4 brake fluid	
	Brake caliper piston seals Brake caliper pin bolt Caliper bracket pin bolt Clutch slave cylinder push rod head Clutch slave cylinder piston seal Brake lever pivot Brake lever adjuster arm piston contacting surface Clutch lever pivot Clutch lever push rod head and pivot	Silicone grease	
	Steering bearing adjustment nut threads Rear axle nut Rear wheel driven sprocket nut	Engine oil	
	Front fork dust seal lips Front fork oil seal lips	Fork fluid	
	Handlebar grip rubbers Brake caliper pad retainer seating surface	Honda bond A or equivalent	
	Front fork socket bolt threads Front brake caliper pin bolt threads Front/rear caliper bracket pin bolt threads Cooling fan nut threads Speedometer reset knob screw threads Shock absorber joint lock nut Ignition switch mounting bolts	Locking agent	