

Requisite Service

- Remove the seat (page 2-2) and rear fairing (page 2-3).

Procedure		Q'ty	Remarks
	Removal Order		<ul style="list-style-type: none"> • Installation is in the reverse order of removal. Disconnect the connector.
(1)	Fuel pump	1	
(2)	Side stand switch connector	1	
(3)	Turn signal relay connector	1	
(4)	Spark unit connector	1	
(5)	Fuel cut off relay connector	1	
(6)	Starter switch	1	
(7)	Rear frame bolt	4	
(8)	Rear frame socket bolt	2	
(9)	Rear master cylinder reservoir bolt	1	
(10)	Rear master cylinder reservoir	1	
(11)	Rear fender bolt	2	
(12)	Rear fender	1	