

Fuel Tank

'90-'93:

▲ WARNING


- Gasoline is extremely flammable and is explosive under certain conditions.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

Removal

Remove the seat (page 2-2).
Turn the fuel valve OFF.

Remove the fuel tank mounting bolt and lift the tank up. Disconnect the fuel sensor connector and fuel tube. Drain the gasoline in the fuel tube into an approved gasoline container.

Unhook the fuel tank and remove it.

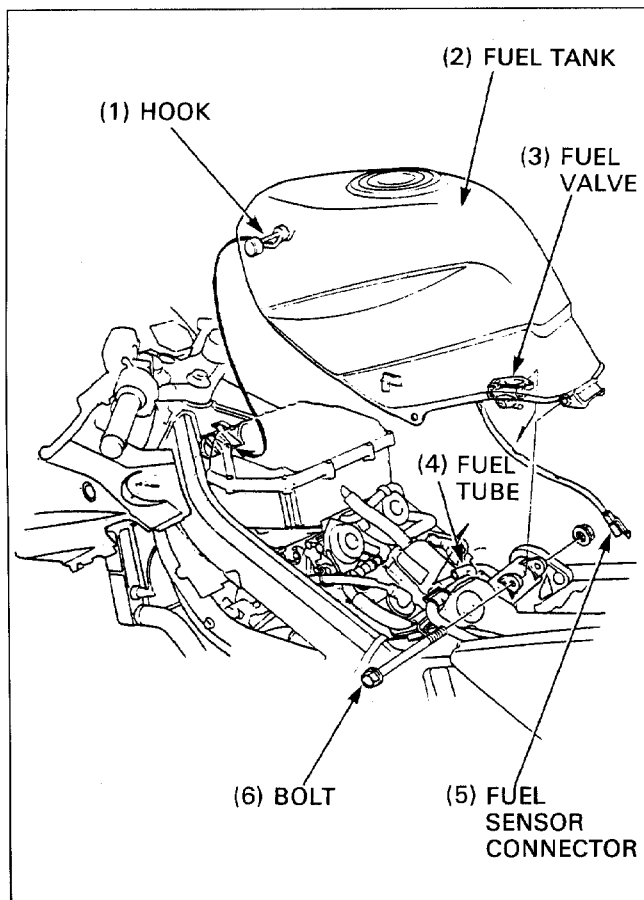


Installation

Install the fuel tank on the frame then secure it with the bolt and nut.

CAUTION

- Install the fuel tube securely on to the guide (2). Do not bent or twist the fuel tube.

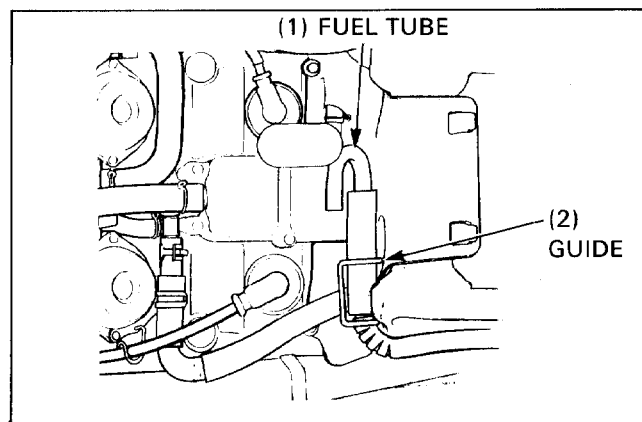

NOTE

- Be sure to turn the fuel valve to ON after installing the fuel tank.

Install the seat (page 2-2).

