


Headlight Aim

⚠ WARNING

- An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.

Adjust the headlight aim horizontally by turning the horizontal adjusting knobs.

Adjust the headlight aim vertically by turning the vertical adjusting knob.

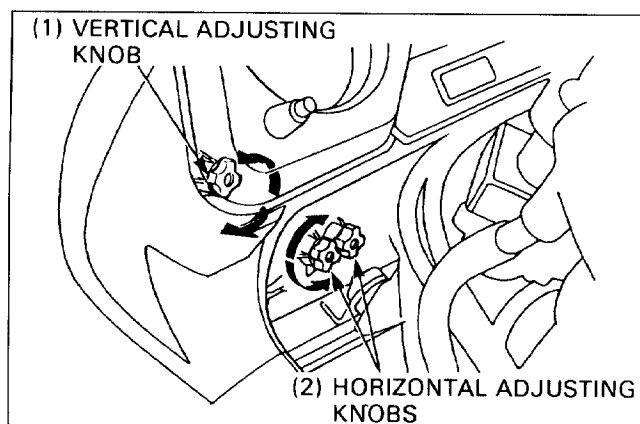

Side Stand

Check the side stand ignition cut-off system:

- Support the motorcycle upright and raise the side stand.
- Start the engine with the transmission in neutral, then shift the transmission into gear with the clutch lever pull in.
- Lower the side stand fully.
- The engine should stop as the side stand is lowered.

If there is a problem with the system, check the side stand switch (Section 18).

Check the side stand switch mounting bolts for looseness.

