

▲ WARNING

- Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

Requisite Service

- Fuel tank removal/installation (page 2-22)
- Air cleaner housing removal/installation (page 6-3)
- Carburetors draining

Procedure		Q'ty	Remarks
	Removal Order		
(1)	Insulator band	4	<ul style="list-style-type: none"> • Installation is in the reverse order of removal. Not necessary to remove, just loosen. After '93: Align the clamps as shown in the illustration before tightening.
(2)	Choke cable	1	
(3)	Throttle cable	2	After installation, adjust throttle free play.
(4)	Fuel tube	1	
(5)	Carburetor assembly	1	
(6)	Insulator	4	Install them so that the screw heads facing outside and the identification mark "CARB" facing the carburetor as shown.
(7)	Heat guard	1	Install with the retaining pins pulled out fully, and secure it by pushing in the pins.