

▲ WARNING

- Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

Requisite Service

- Fuel tank removal/installation (page 2-22)

Procedure		Q'ty	Remarks
Removal Order			• Installation is in the reverse order of removal.
(1)	Fuel fill cap mounting bolt	3	
(2)	Fuel fill cap base	1	
(3)	Heat guard	1	When installing, align the slots in the guard with the claws on the fuel tank.
(4)	Fuel valve assembly	1	
(5)	Fuel filter	1	
(6)	O-ring	1	
(7)	Fuel level sensor	1	Inspection: Section 18.
(8)	O-ring	1	