



⚠ WARNING

- The shock absorber nitrogen under high pressure. Do not allow fire or heat near the shock absorber.
 - Before disposal of the shock absorber, release the nitrogen.
- (See: section 19 of the Common Service Manual; Drilling point for disposal: 1-13)

Requisite Service

- Shock absorber removal/installation (page 13-6)

Procedure	Q'ty	Remarks
(1) Disassembly Order		
(1) Stopper plate	2	Assembly is in the reverse order of disassembly. NOTE: • Refer to page 13-13 for removal/installation.
(2) Spring seat	1	
(3) Spring	1	Install with the tapered end facing the adjuster.
(4) Spring seat	1	
(5) Retaining screw	1	Install so that retaining screw aligns the "O" mark on the damper.
(6) Stopper ring	1	
(7) Adjuster	1	Install so that retaining screw aligns the "O" mark on the damper.
(8) Damper assembly	1	