

NOTE

- Replace the master piston, spring, cups, stopper plate, snap ring and boot as a set.
- The master cylinder piston, cups and spring must be installed as a set.

Requisite Service

- Air bleeding (section 17 of the Common Service Manual)
- Front master cylinder removal/installation (page 12-2)

Procedure		Q'ty	Remarks
	Disassembly Order		• Assembly is in the reverse order of disassembly.
(1)	Brake hose bolt/brake hose	1/1	Refer to page 1-29 for correct routing.
(2)	Sealing washer	2	
(3)	Master cylinder assembly	1	
(4)	Reservoir cover	1	
(5)	Diaphragm plate	1	
(6)	Diaphragm	1	
(7)	Front brake light switch	1	
(8)	Brake lever pivot bolt	1	When installing, apply grease on the brake lever sliding surface.
(9)	Brake lever assembly	1	
(10)	Boot	1	
(11)	Snap ring	1	NOTE: • Install the snap ring with the chamfered side facing inside. • Make sure the snap ring is fully seated in the groove.
(12)	Master piston assembly	1	
(13)	Spring	1	Install with its tapered end toward the piston.