


Ignition System

No spark at either ignition group (No. 1/3 cylinder and No. 2/4 cylinder)

- If there is no spark at either group, the problem is suspected in the primary coil side of the ignition system (ignition coil, or ignition control module (ICM) and ignition coil circuit).

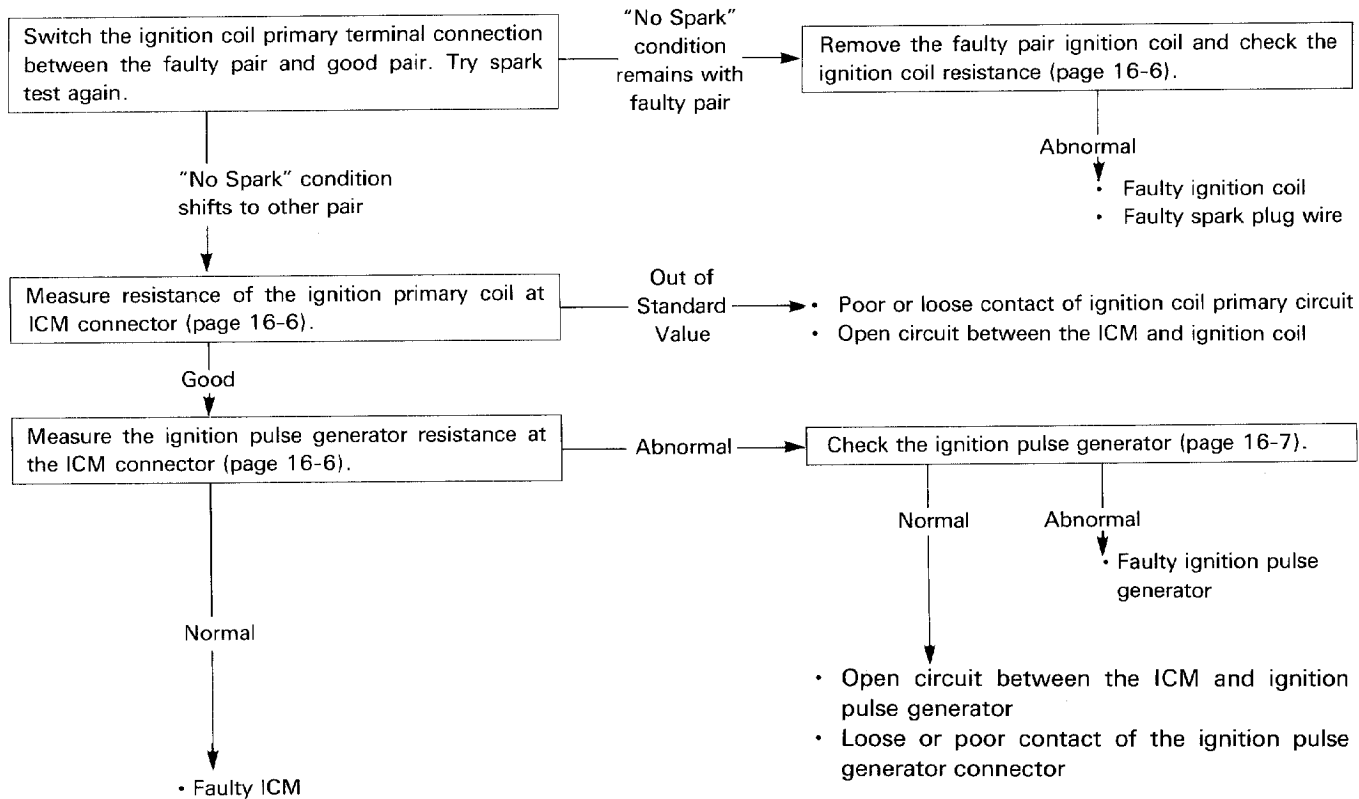

No spark at one plug (Trouble in secondary coil side)

- Faulty spark plug is most likely.

