

Service Information	
Fuel System	6-1
Gearshift Linkage	10-1
Ignition Coil.....	16-6
Ignition System Inspection.....	16-6
Lights/Meters/Switches	18-1
Lubrication System	4-1
Maintenance	3-1
Rear Wheel/Suspension	13-1
Shock Absorber Disassembly/Assembly	
('90-'93 Only)	13-10
Removal/Installation	13-6
Side Stand	3-15
Switch	18-15
Spark Plug	3-7
Specifications	1-5
Starter Clutch Disassembly/Assembly	
Removal/Installation	17-10
Starter Motor Disassembly/Assembly	
Removal/Installation	17-7
Steering Stem Removal/Installation	12-18
Sub Frame/Rear Fender	2-18
Suspension Linkage Disassembly/Assembly	
Removel/Installation	13-14
Swingarm Disassembly/Assembly	
Removal/Installation	13-20
System Flow Pattern	5-2
System Location	
Charging System/Alternator	15-2
Electric Starter/Starter Clutch	17-2
Ignition System	16-2
Lights/Meters/Switches	18-2
Tachometer Inspection	18-14
Taillight	18-7
Thermostat Removal/Installation	5-4
Thermosensor	18-18
Tools	1-23
Torque Values	1-16
Transmission Removal/Installation	11-10
Troubleshooting	
Body Panels/Exhaust System/Sub Frame.....	
Brakes	14-1
Charging System/Alternator	15-3
Clutch System	9-1
Cooling System	5-1
Crankshaft/Piston/Transmission	11-1
Cylinder Head/Valve	8-1
Electric Starter/Starter Clutch	17-4
Engine Does Not Start or is Hard to Start ...	20-1
Engine Lacks Power.....	20-2
Front Wheel/Suspension/Steering	12-1
Fuel System	6-1
Gearshift Linkage	10-1
Ignition System	16-3
Lights/Meters/Switches	18-3
Lubrication System	4-1
Poor Handling	20-4
Poor Performance at High Speed.....	20-4
Poor Performance at Low and Idle Speeds ..	20-3
Rear Wheel/Suspension	13-1
Turn Signal Light	18-7
Upper Fairing	2-10
Valve clearance	3-7
Water Pump/Water Pipe Disassembly/Assembly ..	5-7
Wiring Diagram	19-1