



CARBURETOR REMOVAL

Remove the fuel tank (page 4-13).

Loosen the air cleaner connecting tube bands and remove the connecting tube.

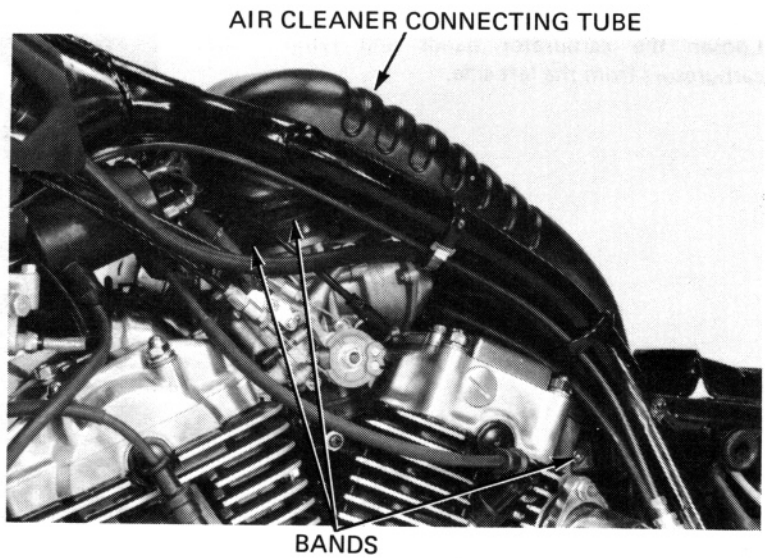

Disconnect the fuel lines at the carburetors.

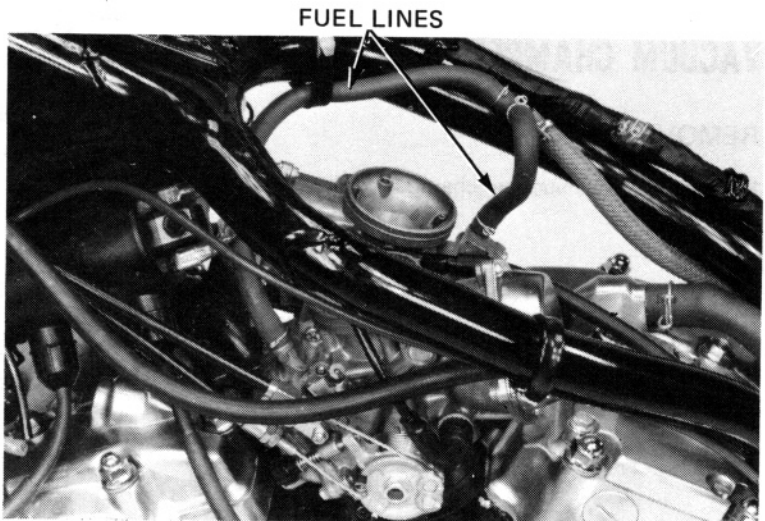

Remove the screws attaching the throttle cable stay and the throttle link cover and stay.

Disconnect the throttle cables from the throttle drum.

Remove the choke cables from the carburetors.

Remove the choke valve and spring from the choke cable.

Check the choke valve and spring for nicks, grooves, or other damage.

