

## EXHAUST PIPE/MUFFLER

### REMOVAL/INSTALLATION


Remove the right side cover (page 2-2).

Loosen the muffler band bolt [1].

Remove the following:

- Front mounting bolt [2] and washer [3]
- Rear mounting bolt [4] and nut [5]
- Muffler [6] and gasket [7]
- Exhaust pipe joint nuts [8]
- Exhaust pipe [9]
- Gasket [10]

- Replace the muffler gasket and exhaust pipe gasket with new ones.
- Temporarily install the exhaust pipe and muffler in the reverse order of removal by loosely installing all the fasteners. Tighten the exhaust pipe joint nuts first, then tighten the muffler band bolt, muffler mounting bolt and nut. After installation, inspect the exhaust system for leaks.

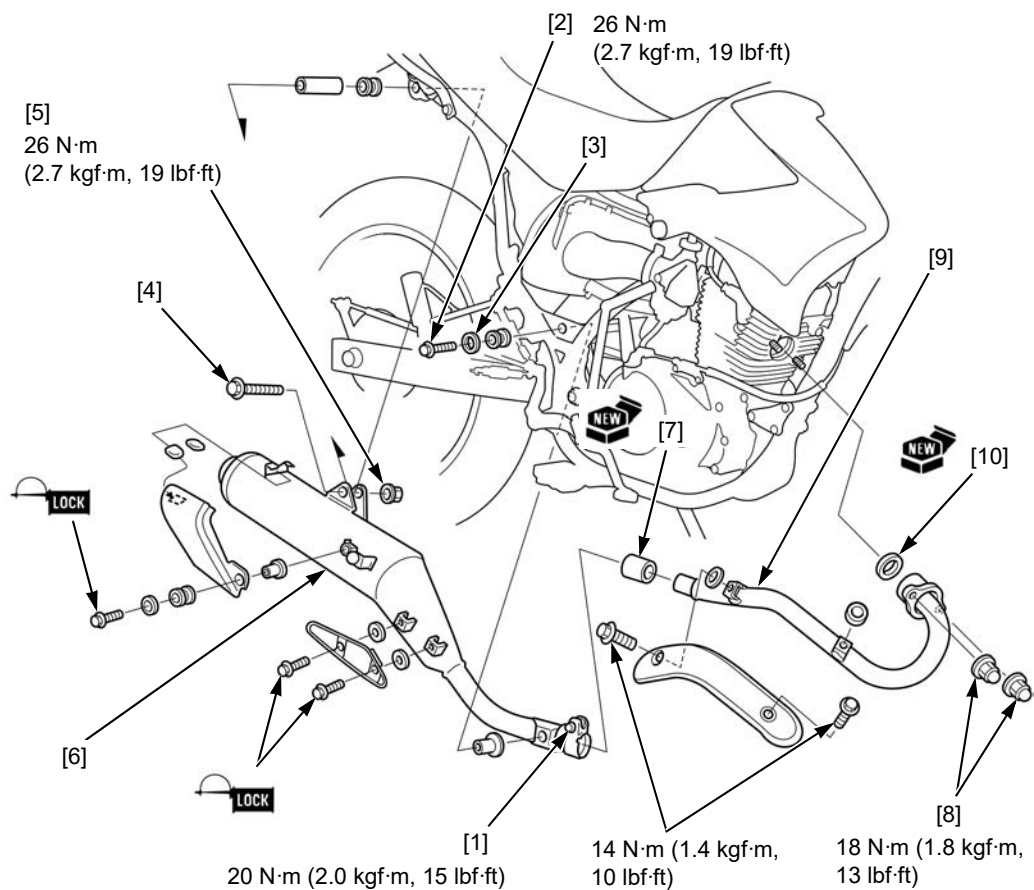

When replacing the stud bolt [1], check that the stud length is within specification as shown.

