


Remove the brake panel [1] and side collar [2].

INSTALLATION (XL125LK)

Install the side collar.

Install the brake panel while aligning the speedometer gear tabs [3] with the grooves [4] on the hub.

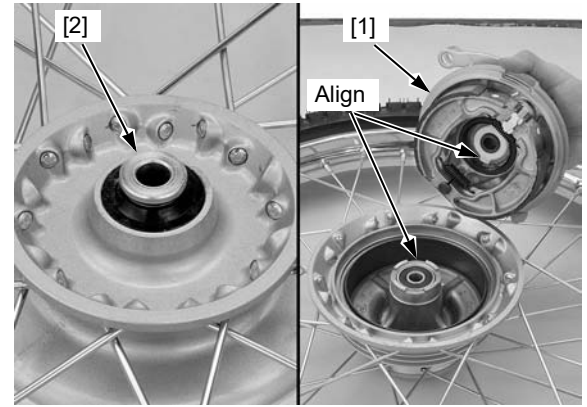


Install the front wheel by aligning the groove on the brake panel with the lug on the left fork leg. Install the front axle [1] from the right side. Install the axle nut [2] and tighten it to the specified torque.

TORQUE: 44 N·m (4.5 kgf·m, 32 lbf·ft)

Install the brake cable [3] into the brake panel and connect it with the joint pin [4] and adjusting nut [5]. Connect the speedometer cable [6].

Adjust the front brake lever freeplay and check the brake operation (page 3-13).

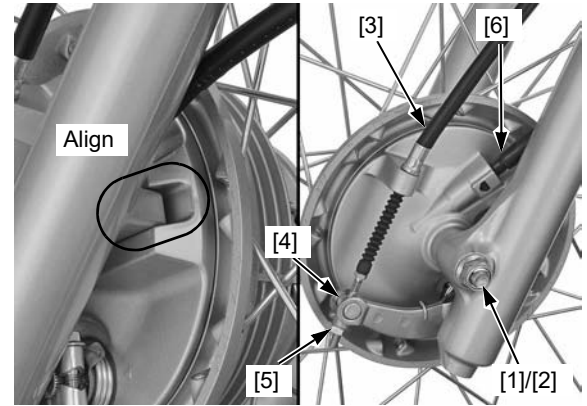

DISASSEMBLY/ASSEMBLY

XR125LK/LEK:

Remove/install the following:

- Dust seals [1]
- Retainer [2]
- Nuts [3]
- Brake disc [4]
- Wheel bearings [5]
- Distance collar [6]

- Replace the bearings and dust seals with new ones.
- Apply grease to the dust seal lips.

Refer to procedures for wheel bearing replacement (page 14-12).

