


BRAKE LIGHT SWITCHES

FRONT (XR125LK/LEK)

Disconnect the front brake light switch connectors [1].

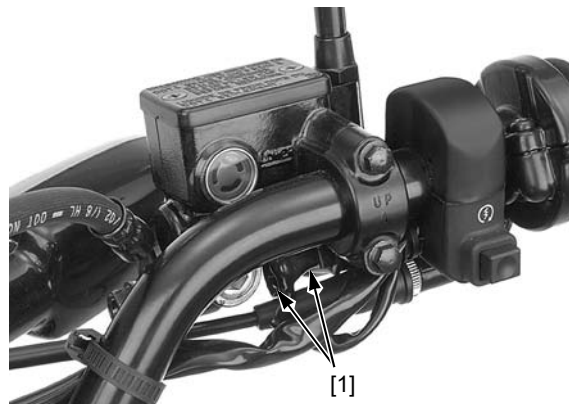

There should be continuity with the brake lever [1] applied, and there should be no continuity when the brake lever is released.




FRONT (XR125LK)

Remove the front visor (page 2-4).

Remove the brake light switch wire connectors [1] from the boot and disconnect them.

There should be continuity with the brake lever applied, and there should be no continuity when the brake lever is released.

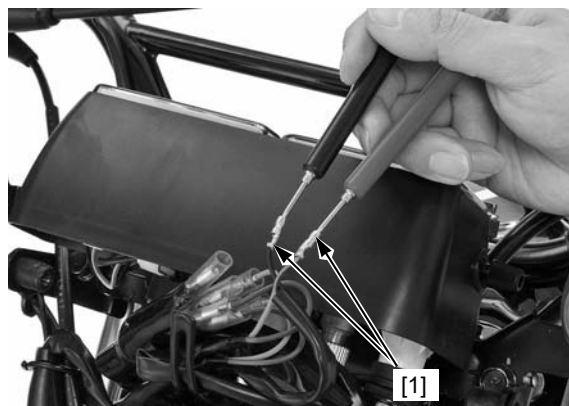

REAR

Remove the left side cover (page 2-2).

Disconnect the rear brake light switch 2P connector [1].

There should be continuity with the brake pedal applied, and there should be no continuity when the brake pedal is released.

