



REAR FENDER/EXHAUST PIPE

EXHAUST PIPE

WARNING

Do not service the exhaust pipes while they are hot.

REMOVAL

Remove the seat.
Remove the right side cover.
Loosen the exhaust pipe clamp bolt.

Remove the exhaust pipe joint nuts and remove the exhaust pipe.

Remove the muffler mounting bolts and muffler.
Check the gasket and pipe seal for wear or damage.
Replace if necessary.

INSTALLATION

Installation is essentially the reverse of removal.

NOTE

After installing, make sure that there are no exhaust leaks.

