

GENERAL INFORMATION

FRAME				
ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
FRAME/BODY PANELS:				
Exhaust pipe joint nut	4	8	18 (1.8, 13)	
Exhaust pipe clamp bolt	1	8	20 (2.0, 14)	
Muffler clamp bolt	1	8	20 (2.0, 14)	
Muffler mounting bolt	2	8	32 (3.3, 24)	
Exhaust pipe protector bolt	2	6	12 (1.2, 9)	
MAINTENANCE:				
Fuel valve mounting bolt	2	6	9 (0.9, 6.5)	
Down tube oil drain bolt	1	8	39 (4.0, 29)	
Rear brake pedal adjuster lock nut	1	8	18 (1.8, 13)	
Side stand pivot bolt	1	10	see page 3-22	
Side stand pivot nut	1	10	39 (4.0, 29)	
Spark arrester bolt	3	6	12 (1.2, 9)	
Spoke	68	BC 3.5	4 (0.4, 2.9)	
Rim lock	2	8	13 (1.3, 9)	
LUBRICATION:				
Down tube oil strainer	1	27	54 (5.5, 40)	
Oil inlet pipe bolt	1	12	37 (3.8, 27)	
ENGINE REMOVAL/INSTALLATION:				
Engine hanger plate nut (8 mm)	8	8	26 (2.7, 20)	
(10 mm)	4	10	54 (5.5, 40)	
Right footpeg mounting bolt	2	10	54 (5.5, 40)	
FRONT WHEEL/SUSPENSION/STEERING:				
Brake disc bolt	4	6	20 (2.0, 14)	NOTE 1
Front axle	1	16	88 (9.0, 65)	
Axle holder nut	4	6	12 (1.2, 9)	NOTE 5
Fork center bolt	2	27	54 (5.5, 40)	NOTE 1
Fork cap (to damper rod)	2	12	15 (1.5, 11)	
Fork cap bolt	2	43	30 (3.1, 22)	
Top bridge pinch bolt	4	8	27 (2.8, 20)	
Bottom bridge pinch bolt	4	8	32 (3.3, 24)	
Master cylinder holder bolt	2	6	10 (1.0, 7)	
Clutch lever bracket holder bolt	2	6	10 (1.0, 7)	
Steering head adjusting nut	1	24	see page 14-28	
Steering stem nut	1	24	98 (10.0, 72)	
REAR WHEEL/SUSPENSION:				
Rear brake disc bolt	4	6	20 (2.0, 14)	NOTE 1
Driven sprocket nut	6	8	42 (4.3, 31)	NOTE 5
Drive chain slider screw	3	5	4 (0.4, 2.9)	NOTE 1
Rear axle nut	1	16	93 (9.5, 69)	NOTE 5
Swingarm pivot nut	1	18	108 (11.0, 80)	NOTE 5
Shock absorber mounting nut (upper)	1	10	44 (4.5, 33)	NOTE 5
(lower)	1	10	44 (4.5, 33)	NOTE 5
Shock arm nut (Swingarm side)	1	12	78 (8.0, 58)	NOTE 5
(Shock link side)	1	12	69 (7.0, 51)	NOTE 5
Shock link nut	1	12	69 (7.0, 51)	NOTE 5
Shock absorber spring lock nut	1	56	29 (3.0, 22)	
Damper rod end nut	1	12	26 (2.7, 20)	NOTE 3
Damping adjuster	1	24	20 (2.0, 14)	NOTE 3
Swingarm pivot adjusting bolt	1	28	see page 15-33	
Swingarm pivot lock nut	1	28	64 (6.5, 47)	
Side stand mounting bolt (8 mm socket bolt)	1	8	26 (2.7, 20)	
(10 mm socket bolt)	2	10	39 (4.0, 29)	