

MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINTENANCE		REGULAR MAINTENANCE INTERVAL					Refer to page
			mi	100	600	1,200	1,800	2,400		
			km	150	1,000	2,000	3,000	4,000		
			MONTH	1	6	12	18	24		
* FUEL LINE						I		I	3-5	
** FUEL STRAINER SCREEN						C		C	3-5	
* THROTTLE OPERATION						I		I	3-5	
AIR CLEANER		NOTE 1			C	C	C	C	3-6	
SPARK PLUG					I	I	I	I	3-7	
* VALVE CLEARANCE				I	I	I	I	I	3-8	
ENGINE OIL				R	R	R	R	R	3-10	
ENGINE OIL FILTER				R	R	R	R	R	3-12	
* ENGINE OIL STRAINER SCREEN IN DOWN TUBE				I		C		C	4-2	
* DECOMPRESSOR SYSTEM				I	I	I	I	I	3-13	
** ENGINE IDLE SPEED				I	I	I	I	I	3-13	
RADIATOR COOLANT		NOTE 2				I		R	3-14	
* COOLING SYSTEM				I	I	I	I	I	3-14	
DRIVE CHAIN		NOTE 1		I, L	I, L: Every 300 mi (500 km) or 3 months				3-15	
DRIVE CHAIN SLIDER					I	I	I	I	3-18	
BRAKE FLUID		NOTE 2			I	I	I	I	3-19	
BRAKE PAD WEAR					I	I	I	I	3-20	
BRAKE SYSTEM				I	I	I	I	I	3-20	
BRAKE LIGHT SWITCH						I		I	3-21	
* HEADLIGHT AIM						I		I	3-21	
CLUTCH SYSTEM				I	I	I	I	I	3-21	
SIDE STAND						I		I	3-22	
* SUSPENSION						I		I	3-22	
* SPARK ARRESTER					C: Every 1,000 mi (1,600 km) or every 100 operating hours				3-24	
* NUTS, BOLTS, FASTENERS				I		I		I	3-24	
** WHEELS/TIRES				I	I	I	I	I	3-25	
** STEERING HEAD BEARINGS				I		I		I	3-25	

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified.

** In the interest of safety, we recommend these items be serviced only by an authorized HONDA dealer.

- NOTES:
1. Service more frequently if the motorcycle is ridden in usually wet or dusty areas.
 2. Replace every 2 years. Replacement requires mechanical skill.