


Remove the crankcase oil drain bolt and sealing washer.
Drain the engine oil.

Check the sealing washer for damage.
Replace if necessary.

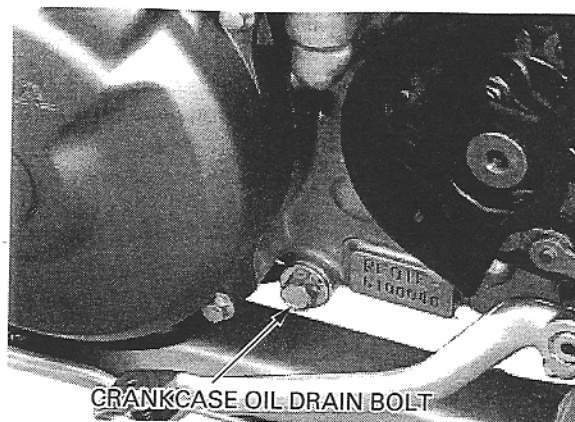


Install the down tube oil drain bolt/sealing washer and crankcase oil drain bolt/sealing washer.
Tighten to the specified torque.

TORQUE:

Crankcase oil drain bolt: 25 N·m (2.5 kgf·m, 18 lbf·ft)
Down tube oil drain bolt: 39 N·m (4.0 kgf·m, 29 lbf·ft)

Clean the down tube oil strainer screen (page 4-2).

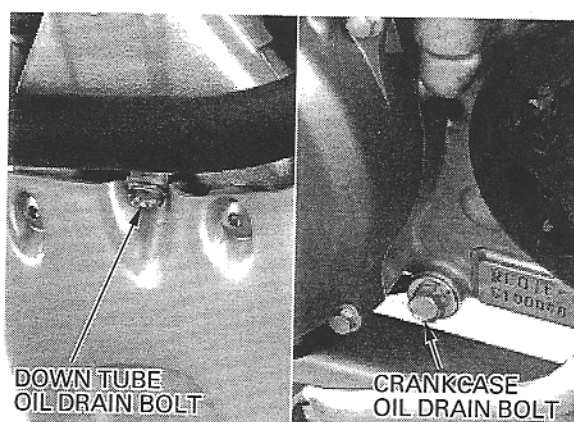


Fill to the filler neck with the correct quantity of the recommended engine oil.

RECOMMENDED ENGINE OIL:

Honda 4-stroke oil or equivalent motor oil certified to meet API service classification: SE, SF or SG

OIL CAPACITY:

1.56 l (1.65 US qt, 1.37 Imp qt) at draining
1.6 l (1.7 US qt, 1.4 Imp qt) at oil filter change
2.0 l (2.1 US qt, 1.8 Imp qt) at disassembly

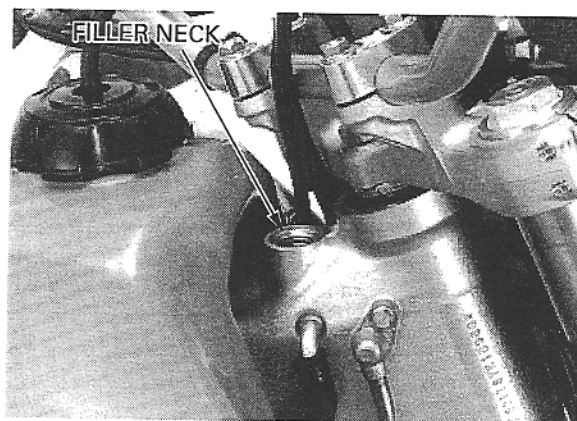

NOTE:

Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.

Start the engine and check that there are no oil leaks.

Stop the engine and check the oil level (page 3-10).

