


FUEL SYSTEM

CHOKE LEVER

Install the choke lever, set plate and screw.
Tighten the screw to the specified torque.


TORQUE: 4 N·m (0.4 kgf·m , 2.9 lbf·ft)

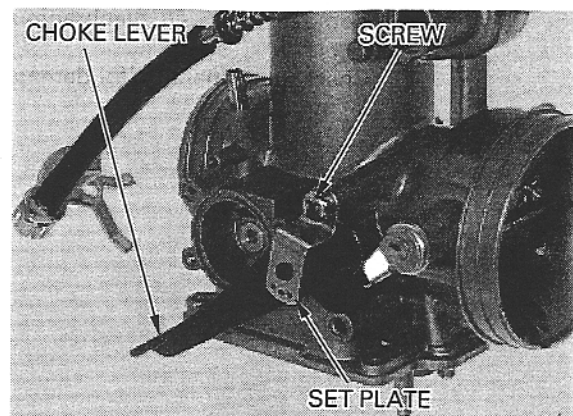

AIR CUT-OFF VALVE

Install the following:

- U-ring
 - Diaphragm
 - Spring
 - Air cut-off valve cover
- Install the U-ring with its flat side toward the carburetor body as shown.*

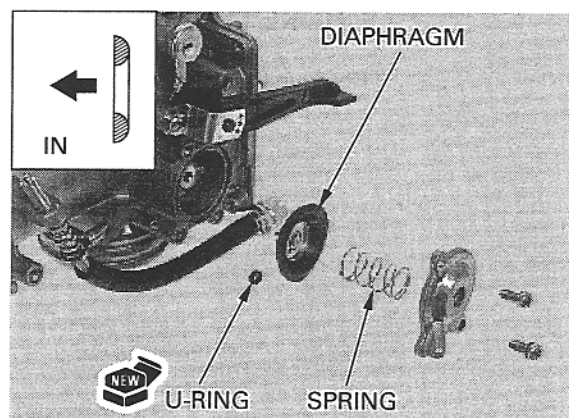

Install and tighten the screws to the specified torque.

TORQUE: 2 N·m (0.2 kgf·m , 1.4 lbf·ft)



THROTTLE VALVE

Install the needle clip on the jet needle.

STANDARD: 3rd groove from top

Install the jet needle in the throttle valve.

