

CYLINDER HEAD/VALVES

Connect the breather tube to the cylinder head cover.

Connect the spark plug cap.

Connect the decompressor cable to the valve lifter lever and install the decompressor cable guide to the cylinder head cover.

Install the fuel tank (page 2-5).

Fill and bleed the cooling system (page 6-5).

