



# CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE

## INSTALLATION

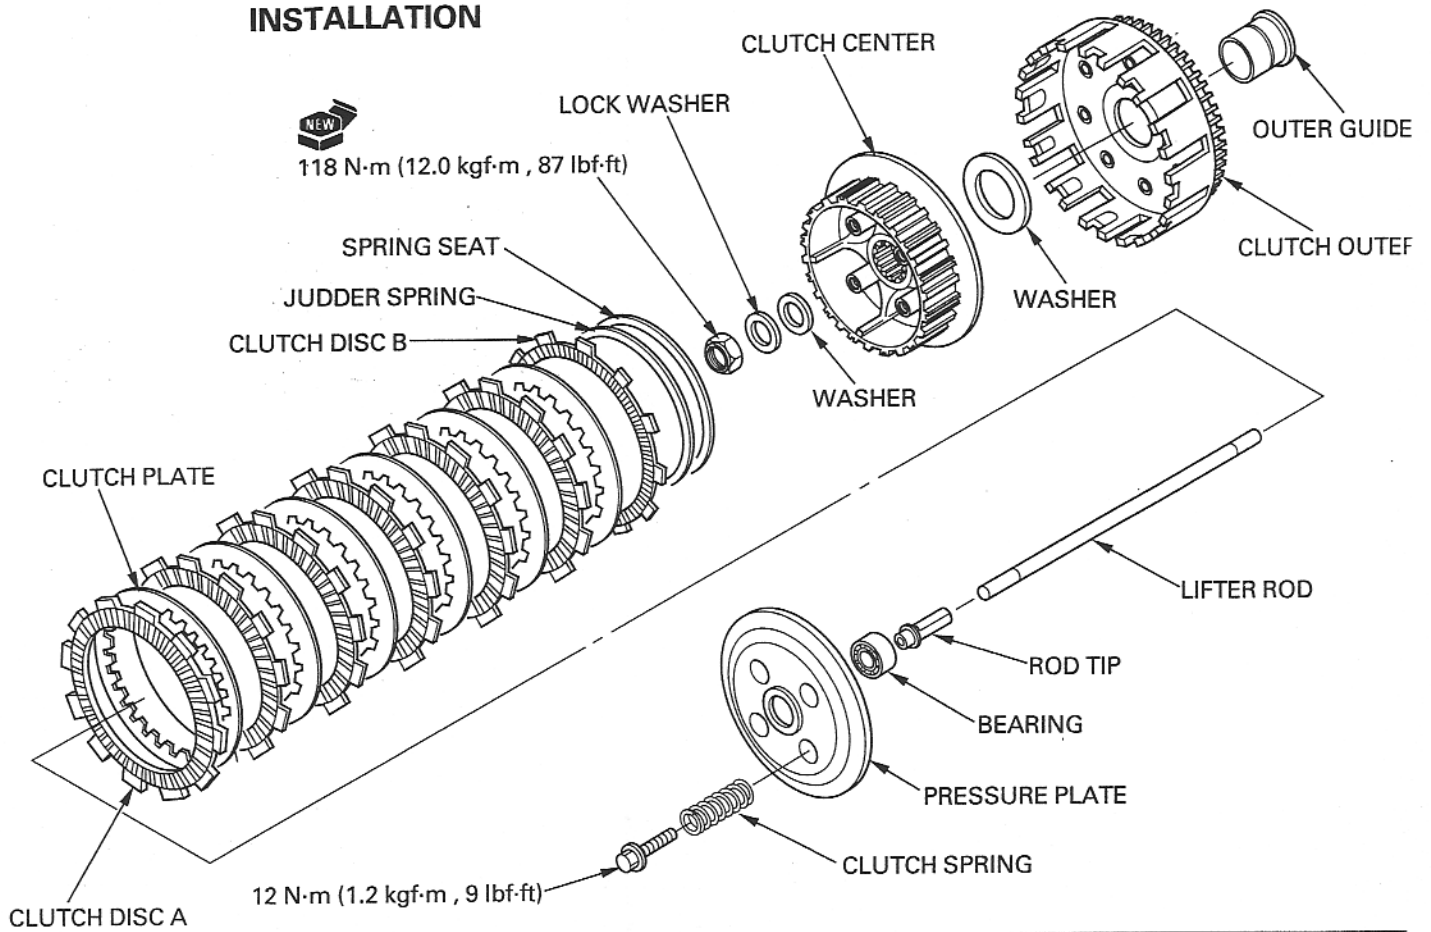

Apply engine oil to the clutch lifter lever sliding surface.  
Install the clutch lifter lever, spring and washer to the crankcase.

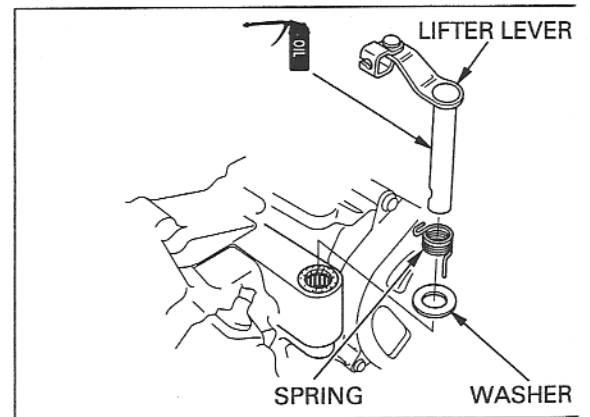

Apply molybdenum solution to the clutch outer guide sliding surface.  
Install the clutch outer guide onto the mainshaft.

