


HYDRAULIC BRAKE


Install the brake pedal joint and secure it with a new cotter pin.

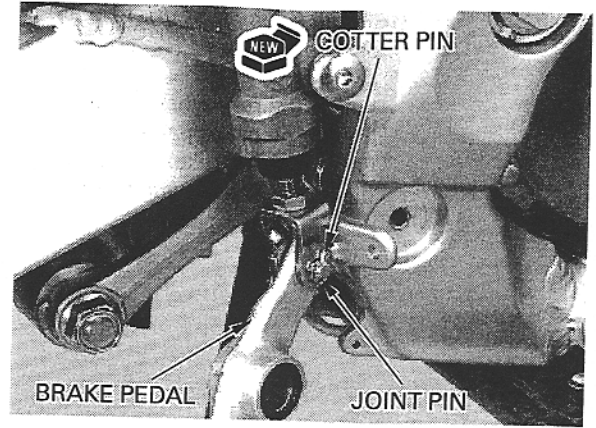

Apply grease to the sliding surface of the brake pedal and pivot bolt.
Install the washer between the frame and brake pedal, and then install the brake pedal pivot bolt.

Tighten the brake pedal pivot bolt to the specified torque.

TORQUE: 25 N·m (2.6 kgf·m, 19 lbf·ft)

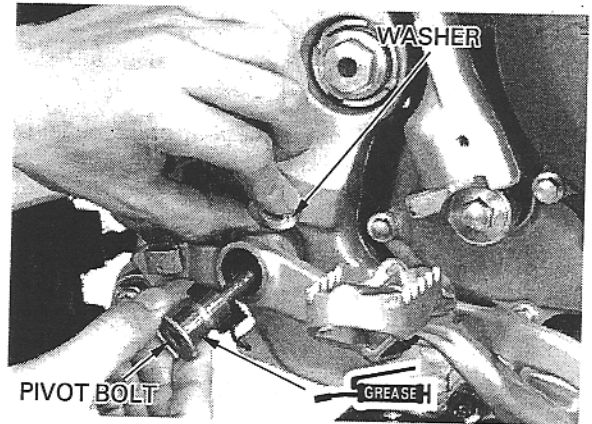

Install the return spring.

Adjust the brake pedal free play (page 3-20).

