

## Rear Suspension

### Rebound Damping:

To reduce (SOFT) :


Turn the adjuster clockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster counterclockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) counterclockwise until it will no longer turn. This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned clockwise approximately 10clicks.

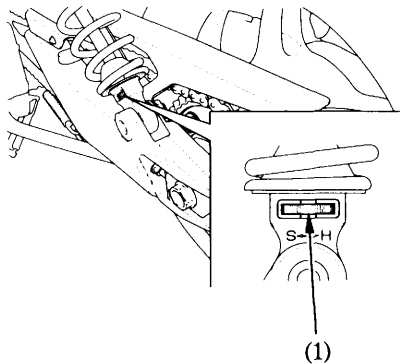

(1) Damping adjuster