

4. Check the clearance by inserting the feeler gauge (3) between the valve adjusting screw (4) and valve stem.

NOTE:

- * When checking the clearance, slide the feeler gauge from the inside out.


Standard clearance:

In. 0.05 mm (0.002 in)

Ex. 0.05 mm (0.002 in)

Adjust by loosening the lock nut (5) and turning the adjusting screw (4) until there is a slight drag on the feeler gauge. After tightening the lock nut (5), recheck the clearance.

5. Install all parts in the reverse order of disassembly.

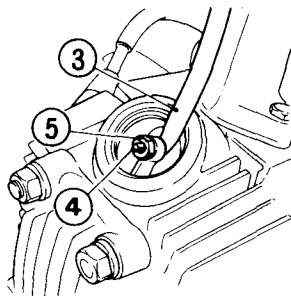

(3) Feeler gauge

(5) Lock nut

(4) Adjusting screw