


# Suspension

## Compression Damping

### LEFT SIDE

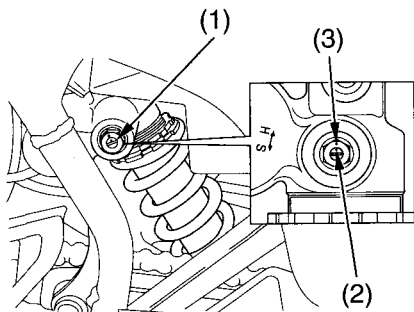

(1) compression damping adjuster

(2) punch mark

(3) reference punch mark

#### *To adjust to the standard position:*

1. Turn the compression damping adjuster ( 1 ) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 8 clicks so that the punch mark ( 2 ) on the adjuster aligns with the reference punch mark ( 3 ). This is the standard position.

#### *To Reduce Compression Damping (SOFT):*

For a light load and smooth road conditions, turn the adjuster counterclockwise toward SOFT (S).

#### *To Increase Compression Damping (HARD):*

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HARD (H).