
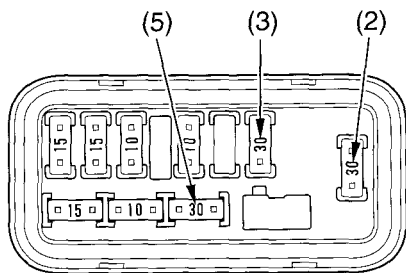


If a Fuse Blows

Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Remove the seat (page 138).
3. Remove the rear fender lid (page 199).
4. To access the main fuse (2) (3), remove the fuse box cover (4).

UNDER SEAT

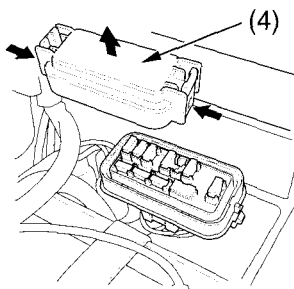

(2) main fuse

(4) fuse box cover

(3) main fuse

(5) spare main fuse

(control motor fuse)

5. Pull the main fuse out.

If it is blown, install the spare main fuse (5).

(cont'd)