


Tighten the locking screws when the correct gap is obtained. Recheck the gap after tightening the locking screws.

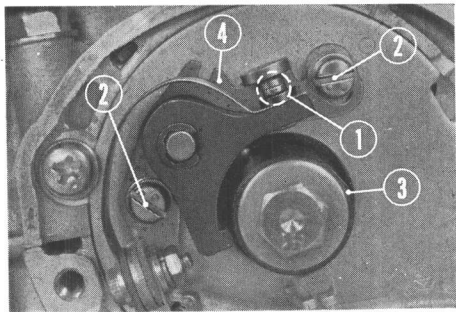


- ① Contact breaker point
- ② Contact breaker plate locking screws
- ③ Point Cam
- ④ Contact breaker point plate

Ignition Timing ·

Adjust the ignition timing upon completing the adjustment of the contact breaker point gap.

1. Turn the generator rotor ⑤ counterclockwise and align the "F" mark ⑥ with the index mark ⑦. The ignition timing is correct if the contact breaker points ① start opening at this moment.

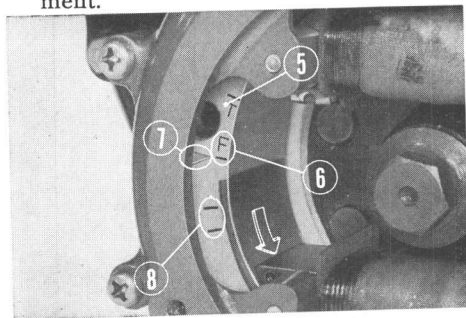

- ⑤ Generator rotor
- ⑥ "F" mark
- ⑦ Index mark
- ⑧ Advance marks