


5. Remove the front axle nut.
6. Loosen the left axle pinch bolts.
7. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.

Axle pinch bolts

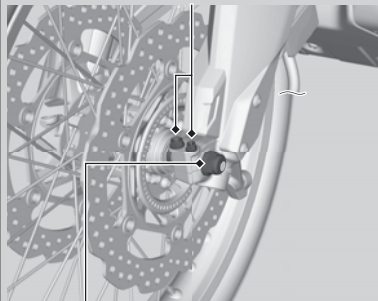


Front axle nut

8. Loosen the right axle pinch bolts.

9. On the right side, loosen and withdraw the front axle shaft, and remove the side collars and wheel.

Axle pinch bolts

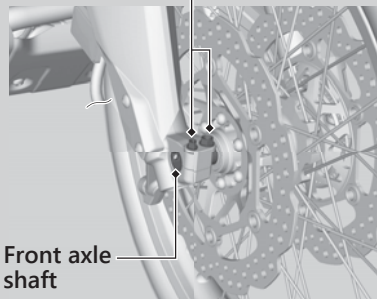

Front axle shaft