


- Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
- Remove the front axle shaft, front wheel and side collars.

Installation

- Attach the side collars to the wheel.
- On the right side, place the wheel between the fork legs and insert the

front axle shaft, through the right fork leg and wheel hub.

- Align the index line of the front axle shaft with the recessed surface of the fork leg.

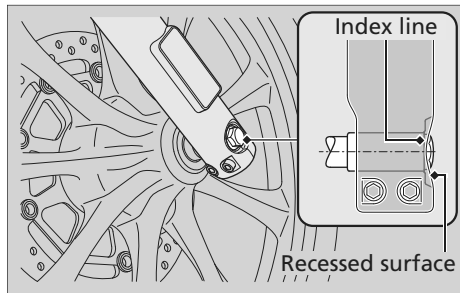

- Tighten the right axle pinch bolts.

Torque: 16 lbf·ft (22 N·m, 2.2 kgf·m).

- Tighten the front axle bolt.

Torque: 47 lbf·ft (64 N·m, 6.5 kgf·m).