

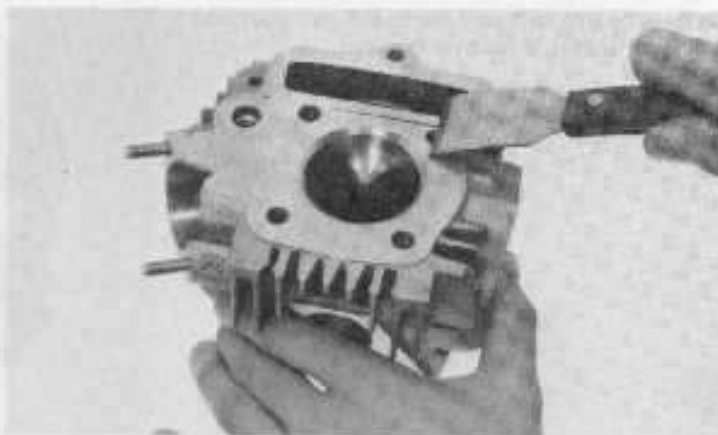


Remove carbon deposits from the combustion chamber.

Clean off the head gasket surface.

NOTE

- Avoid damaging the gasket surface.
- Gasket material will come off easier if soaked in solvent.


ROCKER ARM INSPECTION

Inspect the rocker arms for damage, wear or clogged oil holes.

Measure the I.D. of the rocker arm.

STANDARD: 10.000–10.015 mm
(0.3937–0.3943 in)

SERVICE LIMIT: 10.10 mm (0.398 in)


ROCKER ARM SHAFT INSPECTION

Inspect the rocker arm shaft for wear or damage.

Measure the O.D. of the rocker arm shaft.

STANDARD: 9.878–9.989 mm
(0.3928–0.3933 in)

SERVICE LIMIT: 9.91 mm (0.3902 in)

