


Oil change:

Perform the oil change in the following manner. Drain the oil while the engine is still warm.

1. Remove the oil filler cap (1).
2. Place an empty oil drain pan under the oil tank and crankcase and then remove the drain plug (4). Also remove the oil filter bolt (5) and filter element.
3. After the oil is completely drained, make sure the plain washer on the drain plug is in good condition.

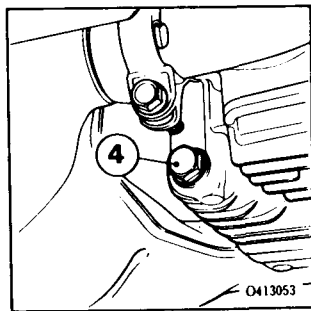

Cambio de aceite:

Efectúe el cambio de aceite de la siguiente manera:

Drene el aceite mientras el motor está todavía caliente.

1. Quite la tapa del llenador de aceite (1).
2. Coloque un recipiente vacío de aceite debajo del depósito de aceite del cárter y luego quite los tapón de drenaje (4). También quite el perno del filtro de aceite (5) y el elemento del filtro.
3. Después de haberlo purgado por completo, asegúrese de que la arandela plana se encuentre en buen estado.

