


MAINTENANCE

Engine Oil

No emphasis cannot be placed upon the importance of use of clean oil in your engine. Always keep oil level between the upper ② and lower ③ level marks on the oil dipstick ①.

If you have to add oil, use the quality oil as recommended in this manual. (Refer to page 40). Change oil while the engine is still warm, using the following steps:

1. Remove the oil filler cap from the upper crankcase.

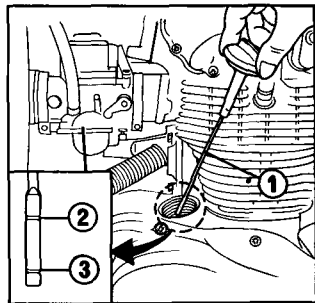

MANTENIMIENTO

Aceite para motor

La propiedad del aceite es esencial para la longevidad de su motocicleta. El nivel de aceite deberá siempre estar entre la marca superior ② y la inferior ③ sobre el indicador de nivel de aceite ①. Si es necesario agregar el aceite, utilizar el aceite de buena calidad según se lo recomienda en el presente manual. (Ver la página 40). El cambio de aceite deberá efectuarse mientras que el motor esté todavía caliente en la manera indicada a continuación:

1. Quitar la tapa de la boca de suministro de aceite desde el cárter superior.

