


## Stoplight Switch Adjustment

You should check the operation of the stoplight switch ① at the right side behind the engine from time to time. Adjustment is done by turning the adjusting nut ②. Turn the nut in the direction ③ if the switch operates too late.

### NOTE:

First make sure the brake is properly adjusted. The stoplight should come on just before the brake functions.

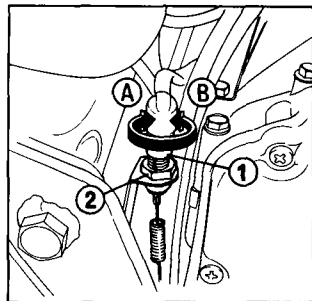

---

## Ajuste del interruptor de la luz de freno

Deberá verificar el funcionamiento del interruptor de la luz de freno ①, situado atrás del motor al lado derecho, de vez en cuando. El ajuste se realiza haciendo girar la tuerca de ajuste ②. Si la luz está encendida demasiado tarde, hacer girar la tuerca en dirección de ③.

### NOTA:

Antes de comenzar el ajuste, asegurarse de que el freno se haya ajustado correctamente. La luz de freno debe estar encendida inmediatamente antes que funcione el freno.