


- If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the lock nut (3) and turn in the cable adjuster (4) completely. Tighten the lock nut (3) and pull on the dust cover.
- At the lower end of the cable, loosen the lock nut (6). Turn the adjusting nut (5) to obtain the specified free play. Tighten the lock nut (6) and check the adjustment.

(A) Increase free play (B) Decrease free play

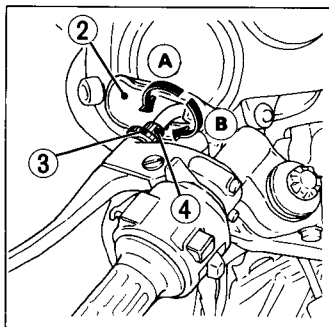

- Si le tendeur est presque dévissé au maximum, ou si l'on ne parvient pas à obtenir la garde correcte, desserrer le contre-écrou (3) et visser le tendeur de câble (4) à fond. Resserrer le contre-écrou (3) et rabattre le cache-poussière.
- Desserrer le contre-écrou (6) qui se trouve à l'extrémité inférieure du câble. Tourner l'écrou de réglage (5) de façon à obtenir la garde voulue. Resserrer le contre-écrou (6) et vérifier le réglage.

(A) Pour augmenter la garde  
 (B) Pour diminuer la garde

