


Brake pads:

The brake pads should be inspected at regular intervals as described in the Maintenance Schedule. Brake pad wear will depend upon the severity of usage, type of riding and condition of the roads. The pads (1) will wear faster on dirty and wet roads. Inspect the pads visually from under the caliper (2) during all regular service intervals to determine the pad wear.

If either pad wears to the wear line (3), both pads (1) must be replaced as a set.

NOTE: Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When brake service is necessary consult your Honda dealer.

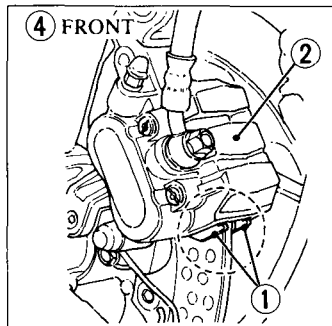

Plaquettes de frein:

Les plaquettes de frein doivent être vérifiées aux intervalles réguliers décrits dans le programme d'entretien. L'usure des plaquettes de frein dépendra des efforts imposés à la machine, du type de conduite et de l'état des routes. Les plaquettes (1) s'useront plus vite sur des routes sales et humides. Vérifier les plaquettes à l'oeil nu lors des contrôles périodiques en regardant par le dessous de l'étrier de frein (2) pour déterminer leur degré d'usure. Si l'une ou l'autre des plaquettes est usée jusqu'au repère d'usure (3), remplacer les deux plaquettes (1) en même temps.

NOTE: N'utiliser que des plaquettes de friction de remplacement Honda d'origine offertes par un concessionnaire autorisé Honda. Lorsqu'un entretien de frein est nécessaire, consulter votre concessionnaire Honda.

(4) AVANT (5) ARRIÈRE

