


High-low speed range selector lever

The speed range selector lever (1) is located on the left crankcase cover at the bottom side of the posi-torque cover. When additional power is required for climbing a steep grade or riding with a heavy load, shifting the selector lever to the "L" range will provide the necessary power.

To shift posi-torque:

1. Stop the engine.
2. Place main transmission in neutral.
3. Move rear wheel slowly by hand while turning selector lever.

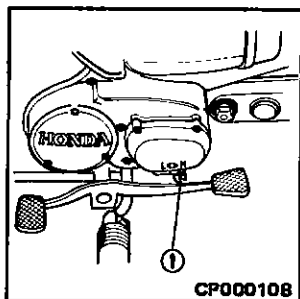

Selector de gama de velocidades

La palanquita selectora del gama de velocidad (1) se encuentra a la izquierda de la cubierta del cárter debajo de la cubierta del "posi-torque". Cuando se necesite más fuerza del motor para subir cuestas muy pronunciadas o para llevar cargas muy pesadas, bastará pasar el selector (1) a la posición "L".

Para ello:

1. Pare el motor.
2. Pase el cambio de la transmisión a neutro.
3. Gire lentamente, con la mano, la rueda trasera mientras mueve el selector a la posición "L".